

Index

A

- About this manual, 0-5
- Accelerator cable and hand throttle cable, removal, refitting and adjustment
 - carburetted engines, 4A-5
 - diesel engines, 4C-3
- Accelerator cable, removal, refitting and adjustment, 4B-4
- Aerial, removal and refitting, 12-7
- Air cleaner and precleaner, removal and refitting, diesel engines, 4C-3
- Air cleaner assembly, removal and refitting, 4B-4
- Air cleaner housing, removal and refitting, 4A-5
- Air conditioning
 - and heating system, check and maintenance, 3-10
 - compressor, removal and refitting, 3-11
 - condenser, removal and refitting, 3-12
 - evaporator core(s), removal and refitting, 3-7
 - receiver/drier, removal and refitting, 3-11
- Air filter and PCV filter check and renewal, 1-20
- Alignment, general information, 10-10
- Alternator
 - overhaul, 5-8
 - removal and refitting, 5-7
- Antifreeze, general information, 3-2
- Automatic Temperature Control (ATC) system, 6-4
- Automatic transmission, 7B-1 through 7B-6
 - diagnosis, general, 7B-2
 - fluid and filter change, 1-29
 - fluid level check, 1-12
 - inhibitor switch, check, renewal and adjustment, 7B-3
 - mount, check and renewal, 7B-4
 - power shift (mode) switch, check and renewal, 7B-4
 - rear oil seal, renewal, 7B-4
 - removal and refitting, 7B-5
 - shift linkage, check and adjustment, 7B-3
- Automotive chemicals and lubricants, 0-15
- Axle assembly (front or rear), removal and refitting, 8-15

B

- Battery
 - cables, check and renewal, 5-2
 - check, maintenance and charging, 1-16
 - emergency jump starting, 5-2
 - removal and refitting, 5-2
- Blower motor, check and renewal, 3-5
- Body, 11-1 through 11-16
 - bonnet release latch, removal and refitting, 11-6
 - bonnet, removal, refitting and adjustment, 11-5
 - bumpers, removal and refitting, 11-6
 - centre console and floor lever trims, removal and refitting, 11-12
 - dash trim panels, removal and refitting, 11-12
 - door
 - latch, lock cylinder and handles, removal and refitting, 11-8
 - removal, refitting and adjustment, 11-9
 - trim panel, removal and refitting, 11-6
 - door window glass
 - regulator, removal and refitting, 11-9
 - removal and refitting, 11-9
 - front fender, removal and refitting, 11-6
 - hinges and locks, maintenance, 11-5
 - instrument panel, removal and refitting, 11-13
 - maintenance, 11-1
 - outside mirrors, removal and refitting, 11-9
 - radiator grille, removal and refitting, 11-6
 - repair
 - major damage, 11-5
 - minor damage, 11-4
 - seats, removal and refitting, 11-15
 - steering column covers, removal and refitting, 11-11
 - tailgate (utility models), removal, refitting and adjustment, 11-11
 - tailgate doors, removal, refitting and adjustment, 11-10
 - upholstery and carpets, maintenance, 11-4
 - vinyl trim, maintenance, 11-4
 - windscreen and fixed glass, renewal, 11-5

Body mounts check and tightening, 1-24
Bonnet release latch, removal and refitting, 11-6
Bonnet, removal, refitting and adjustment, 11-5
Boost Controlled Deceleration Device (BCDD) system, 6-4
Booster battery (jump) starting, 0-14
Brake check, 1-24
Brake disc, inspection, removal and refitting, 9-6
Brakes, 9-1 through 9-16
 brake disc, inspection, removal and refitting, 9-6
 brake hydraulic system, bleeding, 9-12
 brake light switch, removal, refitting and adjustment, 9-16
 disc brake
 caliper, removal, overhaul and refitting, 9-4
 pads, renewal, 9-2
 drum brake shoes, renewal, 9-7
 hoses and lines, inspection and renewal, 9-11
 load sensing valve, general information and renewal, 9-16
 master cylinder, removal, overhaul and refitting, 9-9
 parking brake
 adjustment, 9-15
 cable, renewal, 9-15
 shoes, inspection and renewal, 9-13
 power brake booster, check, removal and refitting, 9-12
 wheel cylinder, removal, overhaul and refitting, 9-9

Bulb renewal, 12-10**Bumpers, removal and refitting, 11-6****Buying parts, 0-7****C****Camshaft and bearings, removal, inspection and refitting**

3.0 litre engine, 2B-10
 4.2 litre diesel engine, 2C-6
 4.2 litre petrol engine, 2A-13

Carburettor

adjustments and checks, 4A-7
 choke check, 1-28
 diagnosis and overhaul, 4A-6
 removal and refitting, 4A-8

Catalytic converter system, 6-10**Centre console and floor lever trims, removal and refitting, 11-12****Charging system**

check, 5-6
 general information and precautions, 5-6

Chassis electrical system, 12-1 through 12-38

aerial, removal and refitting, 12-7
 bulb renewal, 12-10
 circuit breakers, general information, 12-3
 combination switch, removal and refitting, 12-4
 cruise control system, description and check, 12-12
 door lock system, power, description and check, 12-13
 electric side view mirrors, description and check, 12-12
 electrical troubleshooting, general information, 12-1

fuses, general information, 12-2
 fusible links, general information, 12-3
 headlights
 adjustment, 12-9
 removal and refitting, 12-8
 horn, check and renewal, 12-10
 ignition switch and lock cylinder, removal and refitting, 12-4
 instrument cluster, removal and refitting, 12-5
 instrument panel gauges, check, 12-5
 radio and speakers, removal and refitting, 12-7
 rear window defogger, check and repair, 12-7
 relays, general information and testing, 12-3
 turn signal and hazard flasher, check and renewal, 12-4
 window system, power, description and check, 12-12
 wiper motor, removal and refitting, 12-6
 wiring diagrams, general information, 12-13

Chassis lubrication, 1-17**Circuit breakers, general information, 12-3****Clutch**

components, removal, inspection and refitting, 8-3
 description and check, 8-2
 hydraulic system, bleeding, 8-7
 master cylinder, removal, overhaul and refitting, 8-6
 pedal assembly, removal and refitting, 8-7
 release bearing, renewal, 8-5
 release cylinder, removal, overhaul and refitting, 8-7
 vacuum power booster unit, check, renewal and adjustment, 8-7

Clutch and driveline, 8-1 through 8-20**Clutch/brake pedal height and freeplay adjustment, 1-15****Coil springs, removal and refitting, 10-5****Combination switch, removal and refitting, 12-4****Control unit (3.0 litre engines), removal and refitting, 5-6****Conversion factors, 0-16****Coolant temperature sending unit, check and renewal, 3-5****Coolant temperature sensor, check and renewal, 4C-6****Cooling system**

check, 1-21
 servicing (draining, flushing and refilling), 1-31

Cooling, heating and air conditioning systems, 3-1 through 3-12

air conditioning
 compressor, removal and refitting, 3-11
 condenser, removal and refitting, 3-12
 evaporator core(s), removal and refitting, 3-7
 receiver/drier, removal and refitting, 3-11
 air conditioning and heating system, check and maintenance, 3-10
 antifreeze, general information, 3-2
 blower motor, check and renewal, 3-5
 coolant temperature sending unit, check and renewal, 3-5
 engine cooling fan/clutch assembly, check, removal and refitting, 3-3
 heater and air conditioning control assembly, check, removal and refitting, 3-9

heater core, removal and refitting, 3-6
 radiator and coolant reservoir, removal and refitting, 3-4
 thermostat, check and renewal, 3-3
 water pump
 check, 3-4
 removal and refitting, 3-4

Crankshaft

inspection, 2D-17
 refitting and main bearing oil clearance check, 2D-20
 removal, 2D-13

Crankshaft front oil seal, renewal

3.0 litre engine, 2B-9
 4.2 litre diesel engine, 2C-4
 4.2 litre petrol engine, 2A-9

Crankshaft pulley/vibration damper, removal and refitting

3.0 litre engine, 2B-9
 4.2 litre diesel engine, 2C-4
 4.2 litre petrol engine, 2A-8

Cruise control system, description and check, 12-12**Cyclone pre-air filter check, 1-33****Cylinder compression check, 2D-6****Cylinder head**

cleaning and inspection, 2D-10
 disassembly, 2D-10
 reassembly, 2D-12
 removal and refitting
 3.0 litre engine, 2B-8
 4.2 litre diesel engine, 2C-4
 4.2 litre petrol engine, 2A-7

Cylinder honing, 2D-15**D****Dash trim panels, removal and refitting, 11-12****Disc brake**

caliper, removal, overhaul and refitting, 9-4
 pads, renewal, 9-2

Distributor

advance systems, general information, check and renewal, 5-5
 removal and refitting, 5-4

Door

latch, lock cylinder and handles, removal and refitting, 11-8
 lock system, power, description and check, 12-13
 removal, refitting and adjustment, 11-9
 trim panel, removal and refitting, 11-6

Door window glass

regulator, removal and refitting, 11-9
 removal and refitting, 11-9

Drivebelt check, adjustment and renewal, 1-14**Driveline inspection, 8-8****Driveshafts, differentials and axles, general information, 8-8****Driveshafts, removal and refitting, 8-9****Drum brake shoes, renewal, 9-7****E****Electric side view mirrors, description and check, 12-12****Electrical troubleshooting, general information, 12-1****Electronic Combustion Control System (ECCS)**

check, 4B-4
 component check and renewal, 4B-5
 general information, 4B-4
 general information and ECU removal and refitting, 6-5

Emissions and engine control systems,**6-1 through 6-10**

Automatic Temperature Control (ATC) system, 6-4
 Boost Controlled Deceleration Device (BCDD) system, 6-4
 catalytic converter system, 6-9
 Electronic Combustion Control System (ECCS), general information and ECU removal and refitting, 6-5
 Evaporative Emission Control (EVAP) system, 6-2
 Exhaust Gas Recirculation (EGR) system, 6-3
 Hot Idle Compensation (HIC) system, 6-3
 information sensors, 6-6
 On Board Diagnosis (OBD) system, description and trouble code access, 6-6
 Positive Crankcase Ventilation (PCV) system, 6-3
 Spark Control (SC) system, 6-2

Engine cooling fan/clutch assembly, check, removal and refitting, 3-3**Engine electrical systems, 5-1 through 5-12**

alternator
 overhaul, 5-8
 removal and refitting, 5-7
 battery
 cables, check and renewal, 5-2
 emergency jump starting, 5-2
 removal and refitting, 5-2
 charging system
 check, 5-6
 general information and precautions, 5-6
 control unit (3.0 litre engines), removal and refitting, 5-6
 distributor advance systems, general information, check and renewal, 5-5
 distributor, removal and refitting, 5-4
 ignition coil, check and renewal, 5-4
 ignition system
 check, 5-3
 general information and precautions, 5-2
 power transistor (electronic ignition models), check and renewal, 5-6
 starter motor
 overhaul, 5-10
 removal and refitting, 5-10
 testing in vehicle, 5-9
 starter solenoid, removal and refitting, 5-11
 starting system, general information and precautions, 5-9
 stator (3.0 litre engines), renewal and air gap adjustment, 5-6

Engine oil and filter change, 1-13

Engine oil cooler, removal and refitting, 4.2 litre petrol engine, 2A-17**Engines****4.2 litre petrol engine, 2A-1 through 2A-18**

camshaft and bearings, removal, inspection and refitting, 2A-13

crankshaft front oil seal, renewal, 2A-9

crankshaft pulley/vibration damper, removal and refitting, 2A-8

cylinder head, removal and refitting, 2A-7

engine oil cooler, removal and refitting, 2A-17

exhaust manifold, removal and refitting, 2A-7

flywheel/driveplate, removal and refitting, 2A-15

inlet manifold, removal and refitting, 2A-6

lifters, removal, inspection and refitting, 2A-8

mounts, engine, check and renewal, 2A-17

oil pump, removal, inspection and refitting, 2A-12

rear main oil seal, renewal, 2A-16

repair operations possible with the engine in the vehicle, 2A-2

rocker arms and pushrods, removal, inspection and refitting, 2A-4

sump, removal and refitting, 2A-15

timing chain and sprockets, removal, inspection and refitting, 2A-10

timing chain cover, removal and refitting, 2A-9

Top Dead Centre (TDC) for number one piston, locating, 2A-2

valve cover, removal and refitting, 2A-3

valve springs, retainers and seals, renewal, 2A-4

3.0 litre engine, 2B-1 through 2B-12

camshaft, removal, inspection and refitting, 2B-10

crankshaft front oil seal, renewal, 2B-9

crankshaft pulley, removal and refitting, 2B-9

cylinder head, removal and refitting, 2B-8

exhaust manifold, removal and refitting, 2B-7

flywheel/driveplate, removal and refitting, 2B-12

inlet manifold, removal and refitting, 2B-7

mounts, engine, check and renewal, 2B-12

oil pump, removal, inspection and refitting, 2B-11

rear main oil seal, renewal, 2B-12

repair operations possible with the engine in the vehicle, 2B-2

rocker arm assemblies and lifters, removal, inspection and refitting, 2B-4

sump, removal and refitting, 2B-11

timing belt, removal and refitting, 2B-8

Top Dead Centre (TDC) for number one piston, locating, 2B-3

valve cover, removal and refitting, 2B-3

valve springs, retainers and seals, renewal, 2B-5

4.2 litre diesel engine, 2C-1 through 2C-6

camshaft and bearings, removal, inspection and refitting, 2C-6

crankshaft front oil seal, renewal, 2C-4

crankshaft pulley/vibration damper, removal and refitting, 2C-4

cylinder head, removal and refitting, 2C-4

engine mounts, check and renewal, 2C-6

exhaust manifold, removal and refitting, 2C-4

flywheel/driveplate, removal and refitting, 2C-6

inlet manifold, removal and refitting, 2C-3

lifters, removal, inspection and refitting, 2C-4

oil cooler and oil pump relief valve, removal and refitting, 2C-5

oil pump, removal, inspection and refitting, 2C-5

rear main oil seal, renewal, 2C-6

repair operations possible with the engine in the vehicle, 2C-2

rocker arm assemblies and lifters, removal inspection and refitting, 2C-3

sump, removal and refitting, 2C-6

timing cover, removal and refitting, 2C-4

timing gears, removal, inspection and refitting, 2C-5

Top Dead Centre (TDC) for number one piston, locating, 2C-3

valve cover, removal and refitting, 2C-3

valve springs, retainers and seals, renewal, 2C-3

General engine overhaul procedures, 2D-1 through 2D-24

block

cleaning, 2D-14

inspection, 2D-15

crankshaft

inspection, 2D-17

refitting and main bearing oil clearance

check, 2D-20

removal, 2D-13

cylinder compression check, 2D-6

cylinder head

cleaning and inspection, 2D-10

disassembly, 2D-10

reassembly, 2D-12

cylinder honing, 2D-15

engine overhaul

disassembly sequence, 2D-9

general information, 2D-6

reassembly sequence, 2D-18

engine removal, methods and precautions, 2D-6

engine, removal and refitting, 2D-8

initial start-up and break-in after overhaul, 2D-23

main and connecting rod bearings, inspection, 2D-18

piston rings, refitting, 2D-19

piston/connecting rod assembly

inspection, 2D-16

refitting and rod bearing oil clearance check, 2D-21

removal, 2D-12

rebuilding alternatives, 2D-8

valves, servicing, 2D-12

Evaporative Emission Control (EVAP) system, 6-2**Evaporative Emissions Control system check**

(petrol engines), 1-32

Exhaust Gas Recirculation (EGR) system, 6-3**Exhaust Gas Recirculation (EGR) system check**

(petrol engines), 1-28

Exhaust manifold, removal and refitting

3.0 litre engine, 2B-7

4.2 litre diesel engine, 2C-4

4.2 litre petrol engine, 2A-7

Exhaust system

- check, 1-19
- servicing and general information, 4A-9

F**Fender, removal and refitting, 11-6****Fluid level checks, 1-8**

- automatic transmission fluid, 1-12
- battery electrolyte, 1-9
- brake and clutch fluid, 1-9
- engine coolant, 1-9
- engine oil, 1-8
- power steering, 1-12
- windscreen washer fluid, 1-9

Flywheel/driveplate, removal and refitting

- 3.0 litre engine, 2B-12
- 4.2 litre diesel engine, 2C-6
- 4.2 litre petrol engine, 2A-15

Front hub and wheel bearing check, repack and adjustment, 1-32**Front hub, bearings and axle assembly, check, lubrication and renewal, 8-10****Fuel and exhaust systems**

- carburetted engines, 4A-1 through 4A-10
 - accelerator cable and hand throttle cable, removal, refitting and adjustment, 4A-5
 - adjustments and checks, 4A-7
 - air cleaner housing, removal and refitting, 4A-5
 - carburettor diagnosis and overhaul, 4A-6
 - exhaust system, servicing and general information, 4A-9
 - fuel level sending unit, check and renewal, 4A-4
 - fuel pump/fuel pressure check, 4A-2
 - lines and fittings, inspection and renewal, 4A-2
 - pump, removal and refitting, 4A-4
 - removal and refitting, 4A-8
 - tank
 - cleaning and repair, general information, 4A-4
 - removal and refitting, 4A-3
- fuel injected petrol engines, 4B-1 through 4B-8
 - accelerator cable, removal, refitting and adjustment, 4B-4
 - air cleaner assembly, removal and refitting, 4B-4
 - Electronic Combustion Control System (ECCS), component check and renewal, 4B-5
 - Electronic Combustion Control System (ECCS), general information, 4B-4
 - Electronic Combustion Control System, check, 4B-4
 - fuel level sending unit, check and renewal, 4B-4
 - fuel pressure relief, 4B-2
 - fuel pump/fuel pressure, check, 4B-2
 - lines and fittings, inspection and renewal, 4B-3
 - pump, removal and refitting, 4B-3
- diesel engines, 4C-1 through 4C-8
 - accelerator cable and hand throttle cable, removal, refitting and adjustment, 4C-3

- air cleaner and precleaner, removal and refitting, 4C-3
- coolant temperature sensor, check and renewal, 4C-6
- fuel cut solenoid, check and renewal, 4C-5
- fuel injection pump, removal and refitting, 4C-4
- fuel injectors, removal and refitting, 4C-4
- fuel system, bleeding, 4C-5
- glow plug relay, check and renewal, 4C-6
- glow plugs, check and renewal, 4C-7
- preheat system control unit, check and renewal, 4C-6
- preheat system, general information, 4C-6
- tank
 - cleaning and repair, general information, 4C-4
 - removal and refitting, 4C-4

Fuel filter

- renewal, 1-32
- service (diesel engine), 1-20

Fuel system check, 1-21**Fuses, general information, 12-2****Fusible links, general information, 12-3****G****Gear, steering, removal and refitting, 10-9****General engine overhaul procedures,****2D-1 through 2D-24**

- block
 - cleaning, 2D-14
 - inspection, 2D-15
- crankshaft
 - inspection, 2D-17
 - refitting and main bearing oil clearance check, 2D-20
 - removal, 2D-13
- cylinder compression check, 2D-6
- cylinder head
 - cleaning and inspection, 2D-10
 - disassembly, 2D-10
 - reassembly, 2D-12
- cylinder honing, 2D-15
- engine overhaul
 - disassembly sequence, 2D-9
 - general information, 2D-6
 - reassembly sequence, 2D-18
- engine removal, methods and precautions, 2D-6
- engine, removal and refitting, 2D-8
- initial start-up and break-in after overhaul, 2D-23
- main and connecting rod bearings, inspection, 2D-18
- piston rings, refitting, 2D-19
- piston/connecting rod assembly
 - inspection, 2D-16
 - refitting and rod bearing oil clearance check, 2D-21
 - removal, 2D-12
- rebuilding alternatives, 2D-8
- valves, servicing, 2D-12

Glow plug relay, check and renewal, 4C-6**Glow plugs, check and renewal, 4C-7**

H

- Headlights**
 - adjustment, 12-9
 - removal and refitting, 12-8
- Heater and air conditioning control assembly, check, removal and refitting, 3-9**
- Heater core, removal and refitting, 3-6**
- Hinges and locks, maintenance, 11-5**
- Horn, check and renewal, 12-10**
- Hot Idle Compensation (HIC) system, 6-3**

I

- Idle speed and mixture adjustment, 1-18**
- Ignition**
 - points check, renewal and adjustment, 1-23
 - timing check and adjustment (petrol engines), 1-22
- Ignition coil, check and renewal, 5-4**
- Ignition switch and lock cylinder, removal and refitting, 12-4**
- Ignition system**
 - check, 5-3
 - general information and precautions, 5-2
- Information sensors, 6-6**
- Inhibitor switch, check, renewal and adjustment, 7B-3**
- Initial start-up and break-in after overhaul, 2D-23**
- Inlet manifold, removal and refitting**
 - 3.0 litre engine, 2B-7
 - 4.2 litre diesel engine, 2C-3
 - 4.2 litre petrol engine, 2A-6
- Instrument cluster, removal and refitting, 12-5**
- Instrument panel gauges, check, 12-5**
- Instrument panel, removal and refitting, 11-13**
- Introduction to the Patrol/Maverick, 0-5**

J

- Jacking and towing, 0-14**

L

- Leaf springs and bushes, removal and refitting, 10-4**
- Lifters, removal, inspection and refitting**
 - 4.2 litre diesel engine, 2C-4
 - 4.2 litre petrol engine, 2A-8
- Linkage, steering, inspection, removal and refitting, 10-7**
- Load sensing valve, general information and renewal, 9-16**
- Locking differential, rear, general information, 8-19**

M

- Main and connecting rod bearings, inspection, 2D-18**
- Maintenance schedule, 1-7**
- Maintenance techniques, tools and working facilities, 0-7**
- Manual transmission, 7A-1 through 7A-8**
 - FS5R30A 5-speed transmission, overhaul, 7A-3
 - FS5R50A 5-speed transmission, overhaul, 7A-8
 - overhaul, general information, 7A-2
 - removal and refitting, 7A-2
 - transfer and differential lubricant change, 1-30
 - transfer and differential lubricant level check, 1-26
- Mounts, engine, check and renewal**
 - 3.0 litre engine, 2B-12
 - 4.2 litre diesel engine, 2C-6
 - 4.2 litre petrol engine, 2A-17

O

- Oil cooler and oil pump relief valve, removal and refitting, 4.2 litre diesel engine, 2C-5**
- Oil pump, removal, inspection and refitting**
 - 3.0 litre engine, 2B-11
 - 4.2 litre diesel engine, 2C-5
 - 4.2 litre petrol engine, 2A-12
- On Board Diagnosis (OBD) system, description and trouble code access, 6-6**
- Outside mirrors, removal and refitting, 11-9**
- Oxygen sensor check (fuel injected models only), 1-33**

P

- Panhard bar (coil spring models), removal and refitting, 10-5**
- Parking brake**
 - adjustment, 9-15
 - cable, renewal, 9-15
 - shoes, inspection and renewal, 9-13
- Pilot bearing, inspection, removal and refitting, 8-5**
- Pinion oil seal, renewal, 8-16**
- Piston rings, refitting, 2D-19**
- Piston/connecting rod assembly**
 - inspection, 2D-16
 - refitting and rod bearing oil clearance check, 2D-21
 - removal, 2D-12
- Positive Crankcase Ventilation (PCV) system, 6-3**
- Positive Crankcase Ventilation (PCV) valve check and renewal (petrol engines), 1-21**
- Power brake booster, check, removal and refitting, 9-12**
- Power shift (mode) switch, check and renewal, 7B-4**
- Power steering**
 - fluid level check, 1-12
 - pump, removal and refitting, 10-9
 - system, bleeding, 10-10

- Power transistor (electronic ignition models), check and renewal, 5-6
- Pre-heat air cleaner check (carburetted models), 1-24
- Preheat system
 - control unit, check and renewal, 4C-6
 - general information, 4C-6

R

- Radiator and coolant reservoir, removal and refitting, 3-4
- Radiator grille, removal and refitting, 11-6
- Radio and speakers, removal and refitting, 12-7
- Rear axle and wheel bearing (full-floating), removal and refitting, 8-19
- Rear axle bearing and seal (semi-floating), removal and refitting, 8-17
- Rear main oil seal, renewal
 - 3.0 litre engine, 2B-12
 - 4.2 litre diesel engine, 2C-6
 - 4.2 litre petrol engine, 2A-16
- Rear stabiliser release, removal, refitting and adjustment, 10-6
- Relays, general information and testing, 12-3
- Repair operations possible with the engine in the vehicle
 - 3.0 litre engine, 2B-2
 - 4.2 litre diesel engine, 2C-2
 - 4.2 litre petrol engine, 2A-2
- Rocker arm assemblies and lifters, removal, inspection and refitting
 - 3.0 litre engine, 2B-4
 - 4.2 litre diesel engine, 2C-3
- Rocker arms and pushrods, removal, inspection and refitting, 4.2 litre petrol engine, 2A-4

S

- Safety first!, 0-17
- Seat belt check, 1-16
- Seats, removal and refitting, 11-15
- Shock absorbers (front and rear), removal and refitting, 10-4
- Spark Control (SC) system, 6-2
- Spark plug
 - renewal (petrol engines), 1-26
 - wire, distributor cap and rotor check and renewal (petrol engines), 1-28
- Stabiliser bar and bushes (front and rear), removal and refitting, 10-3
- Starter motor
 - overhaul, 5-10
 - removal and refitting, 5-10
 - testing in vehicle, 5-9

- Starter solenoid, removal and refitting, 5-11
- Starting system, general information and precautions, 5-9
- Stator (3.0 litre engines), renewal and air gap adjustment, 5-6
- Steering column covers, removal and refitting, 11-11
- Steering system
 - alignment, general information, 10-10
 - linkage, inspection, removal and refitting, 10-7
 - power steering
 - pump, removal and refitting, 10-9
 - system, bleeding, 10-10
 - steering gear, removal and refitting, 10-9
 - steering wheel, removal and refitting, 10-7
 - wheels and tyres, general information, 10-10
- Sump, removal and refitting
 - 3.0 litre engine, 2B-11
 - 4.2 litre diesel engine, 2C-6
 - 4.2 litre petrol engine, 2A-15
- Suspension and steering check, 1-19
- Suspension and steering systems, 10-1 through 10-10
- Suspension arms (coil spring models), removal and refitting, 10-5
- Suspension system
 - coil springs, removal and refitting, 10-5
 - leaf springs and bushes, removal and refitting, 10-4
 - panhard bar (coil spring models), removal and refitting, 10-5
 - rear stabiliser release, removal, refitting and adjustment, 10-6
 - shock absorbers (front and rear), removal and refitting, 10-4
 - stabiliser bar and bushes (front and rear), removal and refitting, 10-3
 - suspension arms (coil spring models), removal and refitting, 10-5
- Swivel hub assembly, removal and refitting, 8-15

T

- Tailgate (utility models), removal, refitting and adjustment, 11-11
- Tailgate doors, removal, refitting and adjustment, 11-10
- Thermostat, check and renewal, 3-3
- Timing belt renewal (3.0 litre models), 1-33
- Timing belt, removal and refitting, 3.0 litre engine, 2B-8
- Timing chain and sprockets, removal, inspection and refitting, 4.2 litre petrol engine, 2A-10
- Timing chain cover, removal and refitting
 - 4.2 litre diesel engine, 2C-4
 - 4.2 litre petrol engine, 2A-9
- Timing gears, removal, inspection and refitting, 4.2 litre diesel engine, 2C-5
- Top Dead Centre (TDC) for number one piston, locating
 - 3.0 litre engine, 2B-3
 - 4.2 litre diesel engine, 2C-3
 - 4.2 litre petrol engine, 2A-2

Transfer case, 7C-1 through 7C-2

oil seals, renewal, 7C-1

overhaul, 7C-2

removal and refitting, 7C-2

Transmission, rear oil seal, renewal, 7B-4**Transmission, automatic, 7B-1 through 7B-6**

diagnosis, general, 7B-2

fluid and filter change, 1-29

fluid level check, 1-12

inhibitor switch, check, renewal and adjustment, 7B-3

mount, check and renewal, 7B-4

power shift (mode) switch, check and renewal, 7B-4

rear oil seal, renewal, 7B-4

removal and refitting, 7B-5

shift linkage, check and adjustment, 7B-3

Transmission, manual, 7A-1 through 7A-8

FS5R30A 5-speed transmission, overhaul, 7A-3

FS5R50A 5-speed transmission, overhaul, 7A-8

overhaul, general information, 7A-2

removal and refitting, 7A-2

transfer and differential lubricant

change, 1-30

level check, 1-26

Troubleshooting, 0-18**Tune-up and routine maintenance, 1-1 through 1-34****Tune-up general information, 1-8****Turn signal and hazard flasher, check and renewal, 12-4****Tyre and tyre pressure checks, 1-10****Tyre rotation, 1-15****U****Underbonnet hose check and renewal, 1-14****Universal joint, renewal, 8-9****Upholstery and carpets, maintenance, 11-4****V****Valve clearance adjustment (4.2 litre petrol and diesel engines), 1-28****Valve cover, removal and refitting**

3.0 litre engine, 2B-3

4.2 litre diesel engine, 2C-3

4.2 litre petrol engine, 2A-3

Valve springs, retainers and seals, renewal

3.0 litre engine, 2B-5

4.2 litre diesel engine, 2C-3

4.2 litre petrol engine, 2A-4

Valves, servicing, 2D-12**Vehicle identification numbers, 0-6****Vinyl trim, maintenance, 11-4****W****Water pump**

check, 3-4

removal and refitting, 3-4

Wheel cylinder, removal, overhaul and refitting, 9-9**Wheels and tyres, general information, 10-10****Window defogger, rear, check and repair, 12-7****Window system, power, description and check, 12-12****Windscreen and fixed glass, renewal, 11-5****Wiper blade inspection and renewal, 1-18****Wiper motor, removal and refitting, 12-6****Wiring diagrams, general information, 12-13**